

## © Skip Hop, Inc. 100 W 33 ST, STE 1125, NY, NY 10001 In the US: 888.782.9548 www.skiphop.com

90280410-01

## Adult assembly required.

**CLEANING AND CARE:** Wipe clean with damp cloth. Air dry before storing. Do not place in dishwasher.

**WARNING:** Always use this product with adult supervision. Before each use, inspect the product. Throw away at the first sign of damage or weakness. This product is not a toy. Always check food temperature before feeding. Do not store in direct sunlight, as this may damage product. Before first use, clean the product. Inspect & wipe clean thoroughly before first use and after each use. Clean after each use, as soon as possible.