


SKIP*HOP®

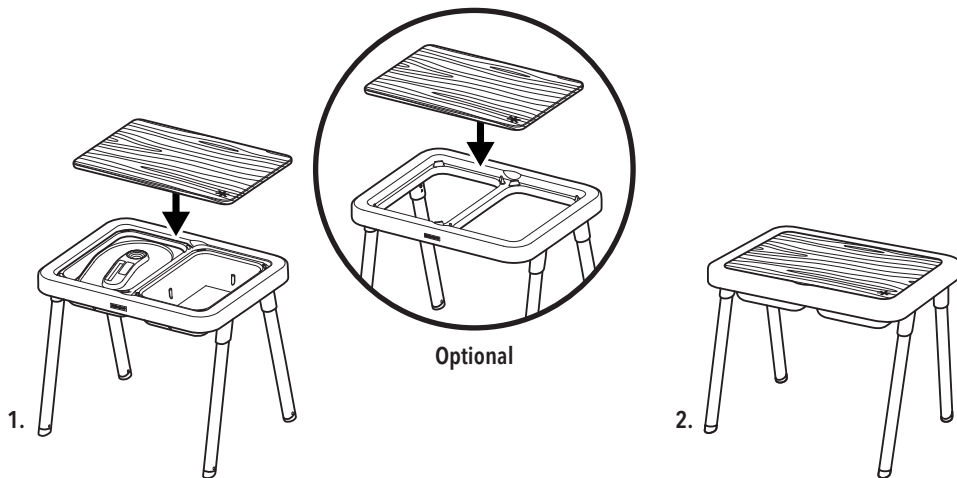

Wood table top installation: Adult assembly required. Remove existing plastic lids and place wood table top. Removing bins is optional.

CLEANING & CARE: Wipe clean with damp sponge and immediately wipe dry. • Keep dry. DO NOT leave wet items on Wood Table Top for extended periods of time. • Always store indoors, in room temperature. Avoid storing near heating and A/C vents.

⚠️ WARNING: ADULT ASSEMBLY REQUIRED.

- This product is not a toy. • Never leave child unattended. • Do not allow children to sit, stand, play, or climb on the top of the table. Failure to do so may cause the product to become unstable. • Do not use this product with food. This product is not food grade material. • Remove and discard all packaging materials properly. Do not allow children to play with packaging.

© Skip Hop, Inc.
100 W 33 ST, STE 1125, NY, NY 10001
In the US: 888.782.9548
US warranty: www.skiphop.com

9R772810-01